




To assemble your Klime-Ezee Knock-Down unit you will require the following...

- ✓ Spanners to fit M8 bolts
- ✓ For larger units you may require additional helpers to safely complete the fixing


Additional information		
KK05 - KK06	0 Bracings	0 Nuts & bolts required
KK07 - KK09	1 Pair of bracings	4 x M8 Nuts & M8 Bolts (provided)
KK10 - KK12	2 Pairs of bracings	6 x M8 Nuts & M8 Bolts (provided)
KK13 - KK16	5 pairs of bracings	10 x M8 Nuts & M8 Bolts (provided)


### Step 1...


-  Carefully wheel your step into an open unrestricted area.
-  Then remove **ONLY** the **WHITE** tie wraps from both sides of your step as shown as 'A' in diagram 1.

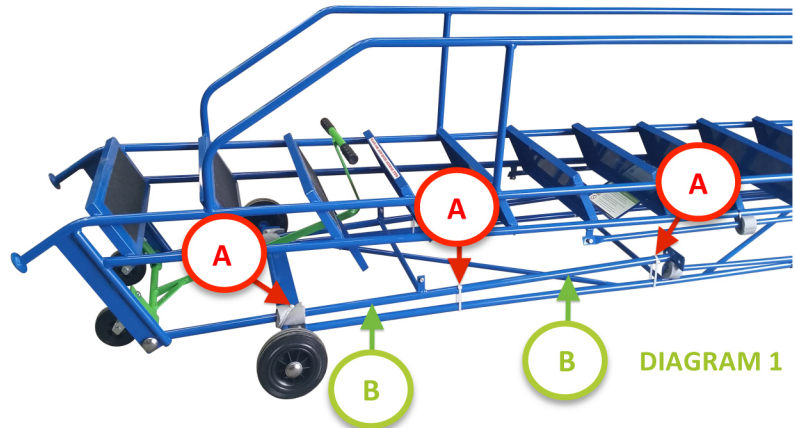


### Step 2...


 Leaving the step lay down, open it out to allow the two base side members, shown as 'B' in diagram 1, to open down this will enable you to lock these into place on the steps back axle.

 Once the base side members have been fit safely and are secure to the back axle, the step can then be stood upright **only if it is a smaller unit**.

 You can now cut the remaining black cable ties to release the side cross and diagonal bracing in diagram 2 which can now be bolted together. **DO NOT ASCEND** the step to do this, please leave larger units lay down until all bolts are fastened.

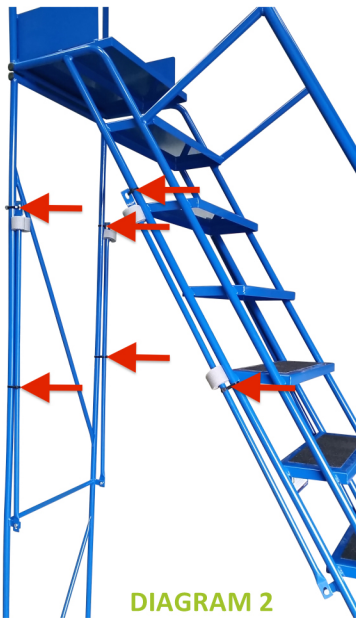

### Step 3...

-  After a final check that ALL metal fastenings have been tightened, there is nothing left to say but congratulations your step is ready to use!